



Smart Bicycle alarm

MTB

User Manual




Usage

How to put the lock?

1. Insert one of the supplied keys in the key barrel rot and rotate clockwise. The key barrel will spring out.

2. Slide the lock into your MTB's front or rear brake disc.

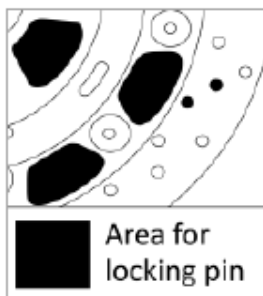

Note: The locking pin can pass through ANY hole on the brake disc (see those dark areas on the diagram)


3. Lock the alarm

You have two options:

- Lock and activate alarm
- Lock and do not activate alarm

Lock and activate alarm: Push the key barrel down and lock. Once it is activated, the lock will give a warning tone 5 seconds after the lock was set. The alarm is now ON.

This means that the movement sensor will start to work automatically in 5 seconds. The lock will burst out a 10 seconds continued siren if it feels any movement or shock. After 10 sec it will stop if no movement or shock anymore. If again movement or shock it will start again.

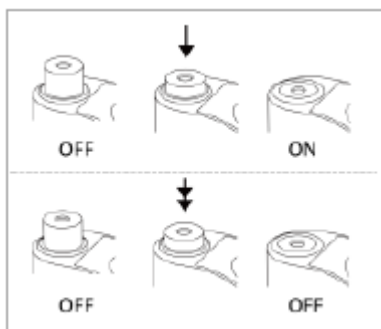

Lock and do not activate alarm: Double press the key barrel before push it down fully (For deactivating the alarm function, pressdown the key barrelhalf way until a “D” sound made and release it. Then, push it down fully in the second press)

How to remove the lock?

Insert one of the supplied keys in the key barrel and rotate anticlockwise to unlock. If the alarm is activated this will also be deactivated.


How to use the optional cable?

There are two uses cases for the cable:

1. As a reminder that the lock is fixed. Do not drive away with your bike if the lock is armed. You can fix the cable to your lock and steering wheel so you are reminded.
2. As an added level of security. This can be the third level of security: Disc lock + movement alarm + connect the cable to an external protection.

You can see that is a great protection for a small package. A security on 3 levels for your MTB.

Battery installation

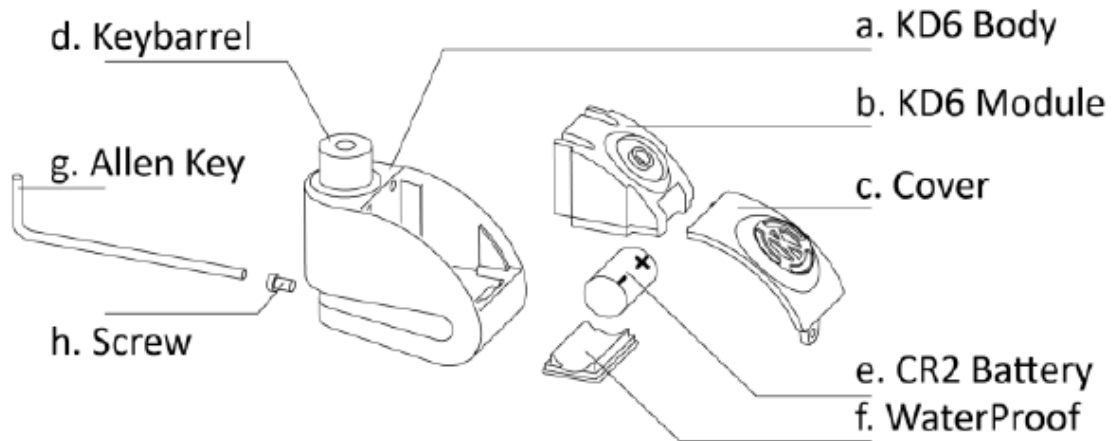

1. Use the Allen Key (g) to release the Screw (h) and remove the Cover (c)
2. Take out the KD6 Module (b) and replace a 3V CR2 Lithium Battery (e)
3. Reinstall the KD6 Module (b) and the Cover (c)
4. Disposal of used battery promptly



Keys

There are 2 keys and 1 flat coded key or plate with identification number (2 letters +6 numbers, i.e. AL 112233) inside the packaging. Keys could be reordered by this number. It is important to keep it in a safe place.

Troubleshooting

Alarm not arming:

Check battery and ensure that the lock is activated and set alarm mode to ON status

Lock making constant click or noise:

Replace battery

When the lock is bursting out a 10 seconds continued siren and then stops:

Replace the new battery

Alarm too sensitive:

The lock might have moved on the disc brake. Place the lock on the brake disc at another angle.

CAUTION:

Please avoid close proximity to your ears as it is an extremely loud alarm (120 db).

In case of any questions please e-mail us on: support@followfast.be

You can also see some movies: www.followfast.be/documentation .

END OF DOCUMENT